

ETC® Service Note

Congo Power Supply Configuration



Overview


Currently the Congo power supply will start to shut down the system at any short power interruption. With the settings detailed below, the console will keep working for 2 minutes before it initiates the shutdown. Additionally it will not shut-down if power is re-applied within 2 minutes.

Procedure

- Step 1: At the Congo logon disk, navigate to the "Settings" option with the arrow keys and press MODIFY.



- Step 2: In the system settings dialog, click the "advanced settings" button.

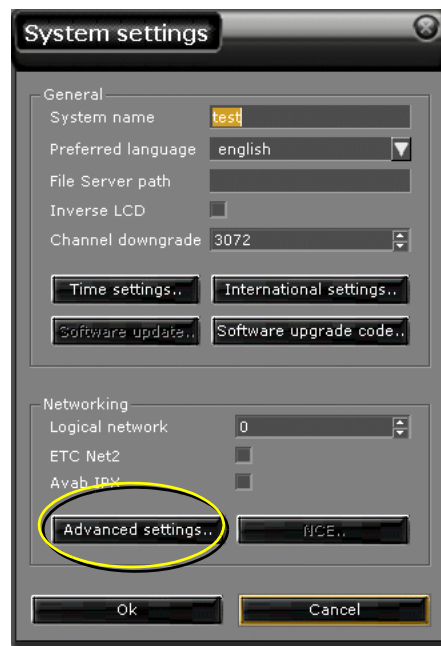


Corporate Headquarters ■ 3031 Pleasant View Road, P.O. Box 620979, Middleton, Wisconsin 53562-0979 USA ■ Tel +608 831 4116 ■ Fax +608 836 1736
London, UK ■ Unit 26-28, Victoria Industrial Estate, Victoria Road, London W3 6UU, UK ■ Tel +44 (0)20 8896 1000 ■ Fax +44 (0)20 8896 2000
Rome, IT ■ Via Ennio Quirino Visconti, 11, 00193 Rome, Italy ■ Tel +39 (06) 32 111 683 ■ Fax +39 (06) 32 656 990
Holzkirchen, DE ■ Ohmstrasse 3, 83607 Holzkirchen, Germany ■ Tel +49 (80 24) 47 00-0 ■ Fax +49 (80 24) 47 00-3 00
Hong Kong ■ Room 605-606, Tower III Enterprise Square, 9 Sheung Yuet Road, Kowloon Bay, Kowloon, Hong Kong ■ Tel +852 2799 1220 ■ Fax +852 2799 9325
Service: (Americas) service@etcconnect.com ■ (UK) service@etcconnect.com ■ (DE) techserv-hoki@etcconnect.com ■ (Asia) service@etcconnect.com
Web: www.etcconnect.com ■ Copyright © 2005 ETC. All Rights Reserved. ■ Product information and specifications subject to change.
7310M3001 ■ Rev A ■ Released 11/2005


ETC Quick Guide

Congo Power Supply Configuration Service Note

Step 3: In the Browser view, click the "up" icon.

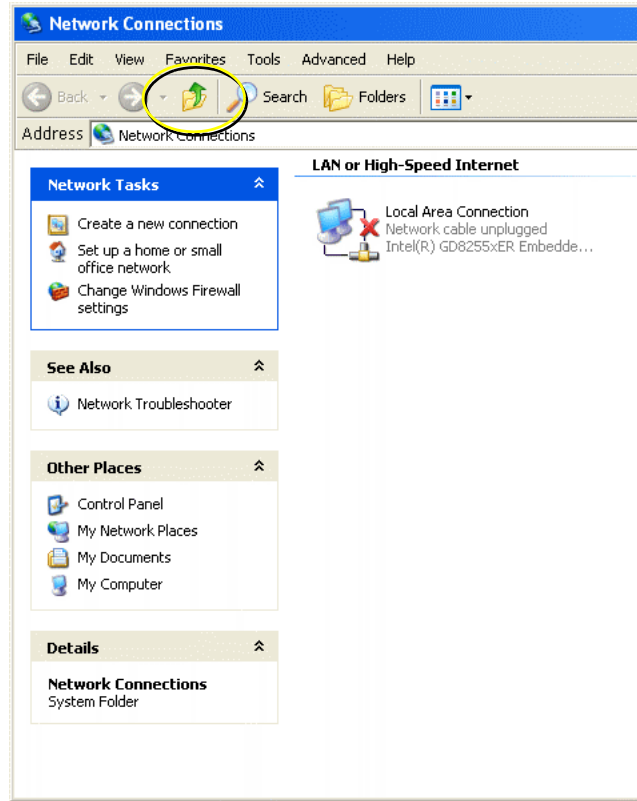


Step 4: In the Control panel view, double-click the Power Options icon.

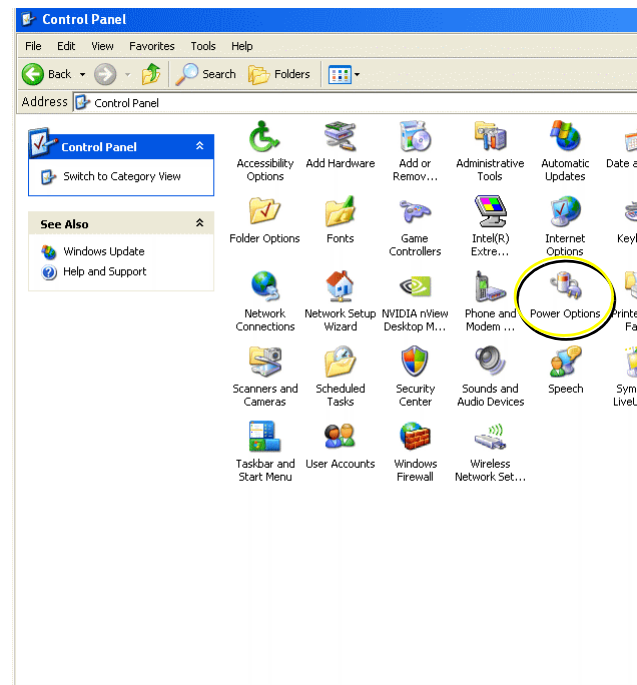


ETC Quick Guide

Congo Power Supply Configuration Service Note


Step 5: Click the UPS tab.

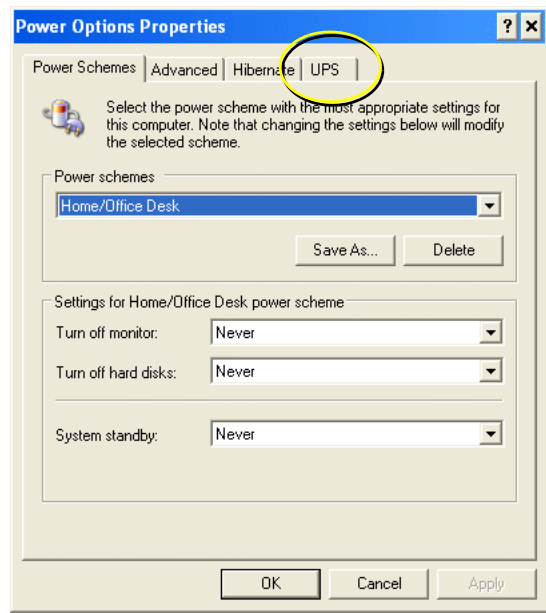

Step 6: Click the Select button

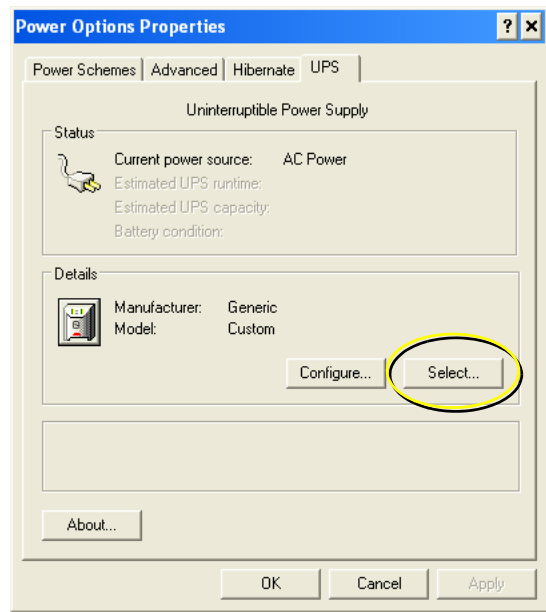


Step 7: Click the Next button.

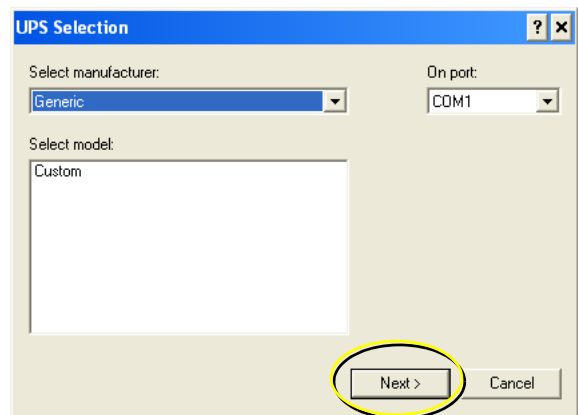


ETC Quick Guide

Congo Power Supply Configuration Service Note

- Step 8: Enable the Low Battery checkbox, and click the "Negative" radio button. Your configuration dialog settings should look like the ones in the picture.
- Step 9: After all settings are correct, click on the "Finish" button.

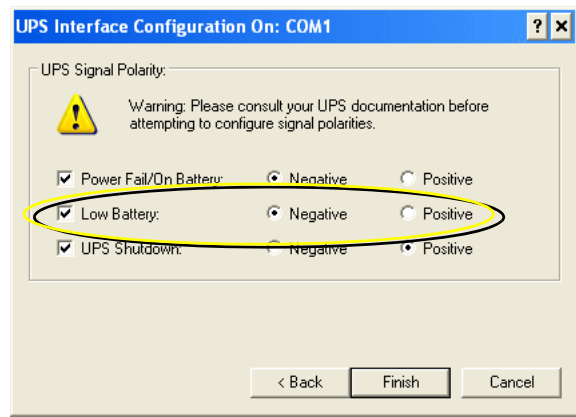


- Step 10: Click the "Configure" button.

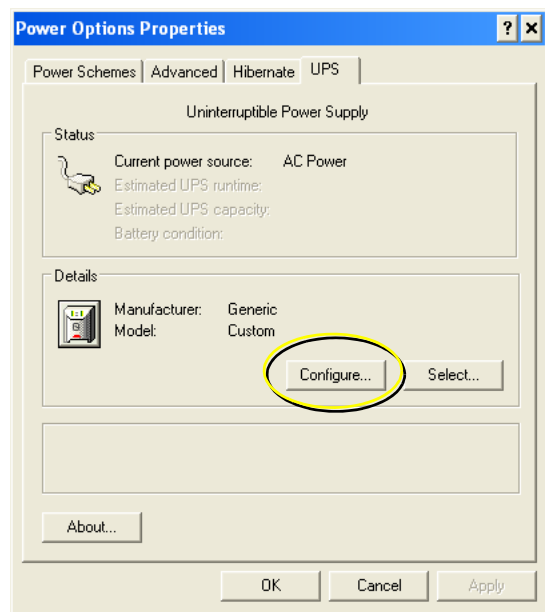


ETC Quick Guide

Congo Power Supply Configuration Service Note

Step 11: Enable the "Minutes on battery before critical alarm:" checkbox and set it to 2 minutes.

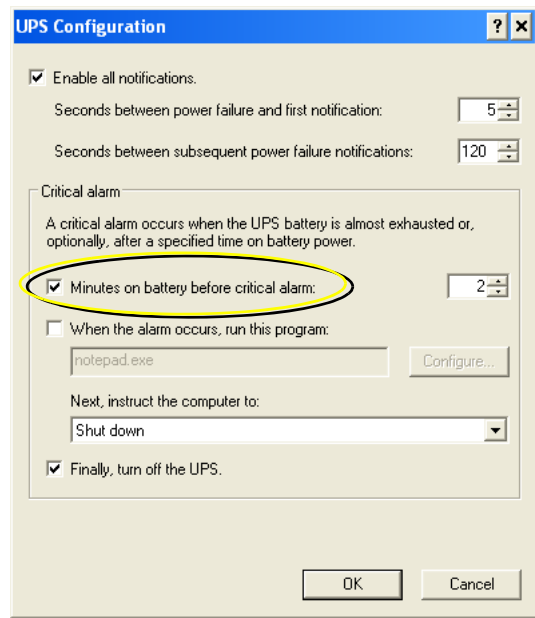

Step 12: Click the "OK" buttons once the configuration dialog looks like the one above.

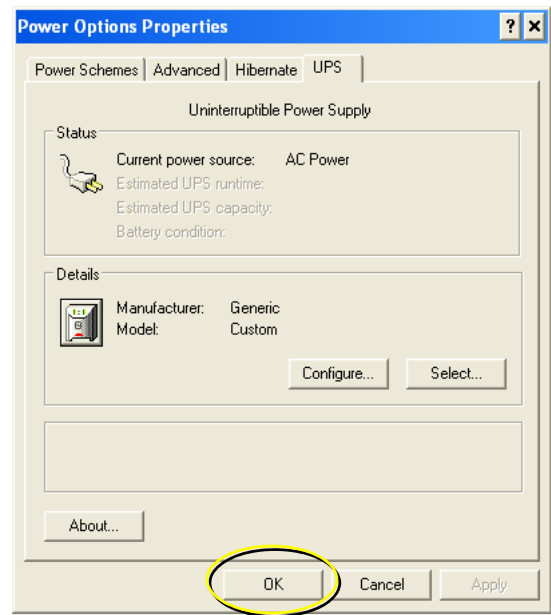

Step 13: After all of the above steps are done, click on the "OK" button, close down the control panel and exit out of the Congo system settings dialog.