 
 
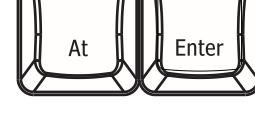 
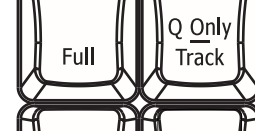 
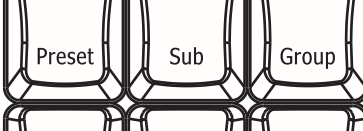 
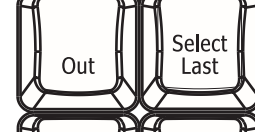 
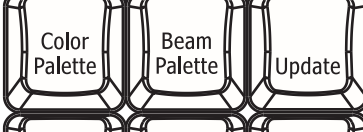 
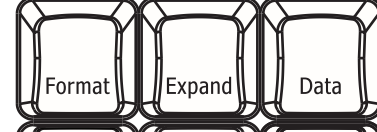 
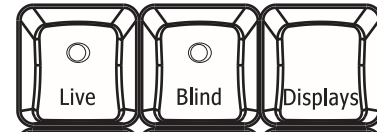 
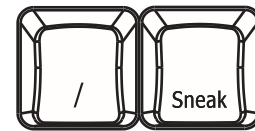 
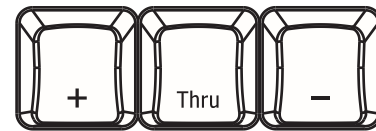 
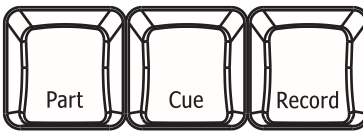 
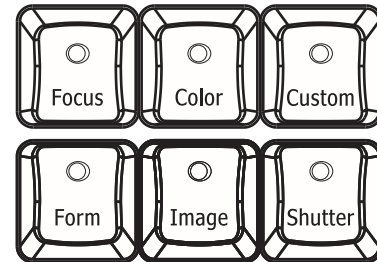 
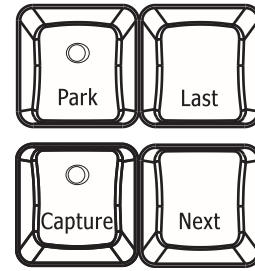 
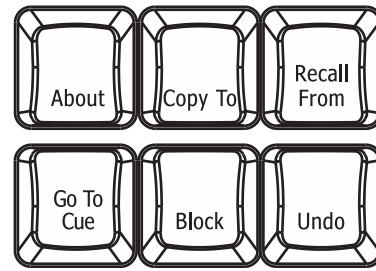 


Key Cap Replacement Setup Guide

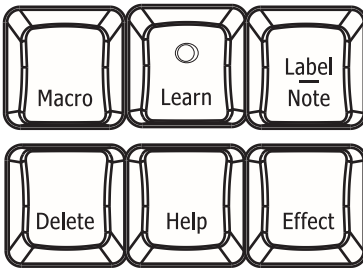

Instructions

- To remove existing caps, gently place the key cap puller around the key cap and pull straight up.
- To remove double wide caps, such as **[Stop/Back]** and **[Go]**, insert the puller on only one side, toward the left edge of the cap. Pull up gently until that side has pulled loose. Move the puller to the right edge and pull up gently to remove.
- When removing caps from locations surrounded completely by the facepanel, first insert one side of the key cap puller. Then gently move the other side of the puller into place and pull straight up to remove.

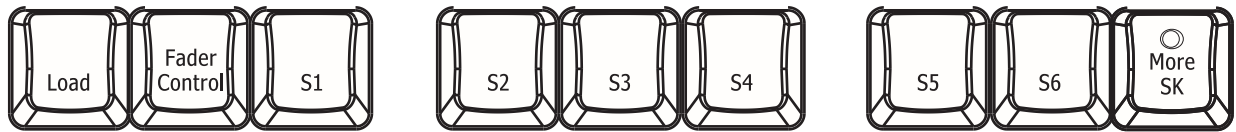