

Ion Console Programming

Level 1: Essentials

V2.4.0 Rev. A

www.etcconnect.com/education

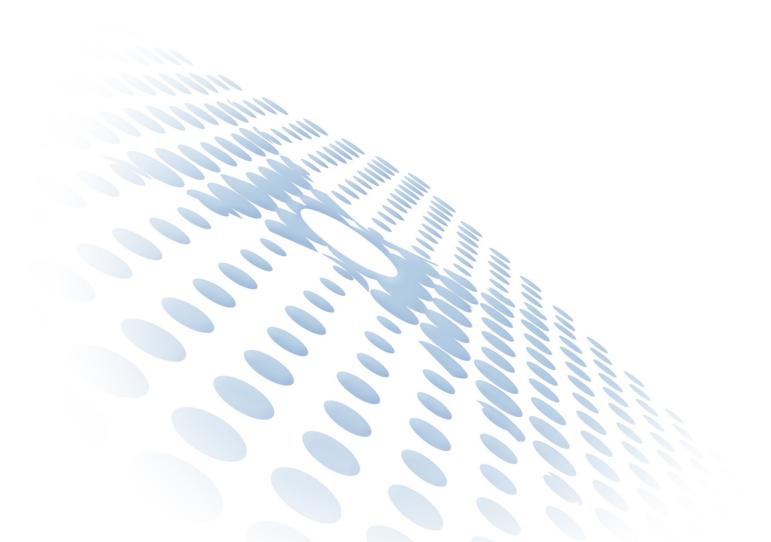


Table of Contents:

PURPOSE OF THE CLASS	4
GETTING ACQUAINTED	5
EXPLORING THE BACK OF THE CONSOLE	5
EXPLORING THE FRONT OF THE CONSOLE	
PLAYBACK STATUS DISPLAY (PSD OR CUE LIST):	7
CENTRAL INFORMATION AREA (CIA)	7
DISPLAY MANAGEMENT TOOLS	g
CHANNEL DISPLAY COLOR CONVENTIONS	11
PATCH	12
WORKING WITH CHANNELS	14
GROUPS	15
WORKING WITH NPS	16
Non-Intensity Parameter Control (FCB)	16
COLOR CONTROLS	17
ML CONTROLS	18
CUES	19
PLAYBACK	20
Additional Cue Timing	21
TRACK/CUE ONLY/BLOCK	
SUBMASTERS	24
Submaster List	26
PARK	27
Park in Live	27
Park Display (Blind)	
SETUP	28
AN INTRO TO EFFECTS	29
A SIMPLE COLOR EFFECT	30
BPM – BEATS PER MINUTE AND TAP RATE	
IMPORTANT CONCEPTS	32
APPENDIX 1 – LEVEL 1 CHANNEL HOOKUP	36
APPENDIX 2 – LEVEL 2 HOOKUP ADDITIONS	38
APPENDIX 3 – SCROLL SETUP	39
ADDENDIY A - SHOW SHE DATA	40

ETC permits the reproduction of materials in this manual only for non-commercial purposes. All other rights are reserved by ETC.

Purpose of the Class

The Ion Essentials class will provide an overview of the console and programming for conventional fixtures. If new to the console, then this class is perfect. Whether transitioning to an Eos family console or a new console owner, this class will teach the basics to get the programmer up and running with this amazing console.

LEARNING OBJECTIVES:

After completing the class, one should be able to:

- Identify key elements of the console user interface and navigation
- Manage show files (save, edit, delete)
- Patch conventional and multi-parameter fixtures
- Work with channels in Live mode
- Record, select, and delete groups
- Record, play, and delete a basic cue
- Record to, load, and clear submasters
- Create step-based effects
- Understand the basics of working with a multi-parameter device (introductory concepts)

WORKBOOK SYNTAX ANNOTATION

•	Bold	Browser menus
•	[Brackets]	Face panel buttons
•	{Braces}	Softkeys and direct selects
•	<angle brackets=""></angle>	Optional keys or command line text
•	[Next] & [Last]	Keys to be pressed & held simultaneously
•	Play Icon	Link to video on FTC's YouTube Channel –

ETCVideoLibrary



HELP

Press and hold [Help] and press any key to see:


- the name of the key
- a description of what the key enables you to do
- syntax examples for using the key (if applicable)

As with hard keys, the "press and hold [Help]" action can be also used with softkeys and clickable buttons

Getting Acquainted


EXPLORING THE BACK OF THE CONSOLE

FAN, POWER SWITCH, VIDEO OUTPUTS, USB, NETWORK, AUDIO, DMX OUTPUTS, MIDI, PHONE REMOTE, REMOTE MACRO/TRIGGER, WORKLIGHT CONNECTOR AND DIMMER

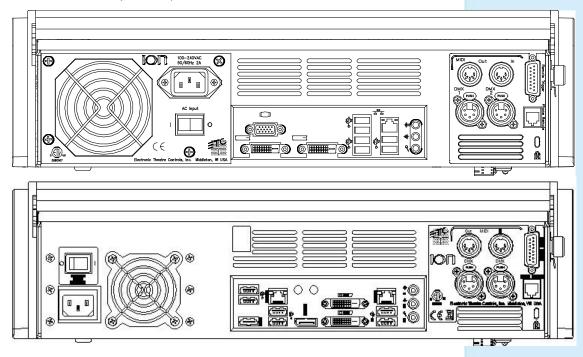

EXPLORING THE FRONT OF THE CONSOLE

U from Power Switch, USB Port, GM, Playback, Keypad (targets, numeric, level setting), level wheel, navigation keys, integrated display & encoders

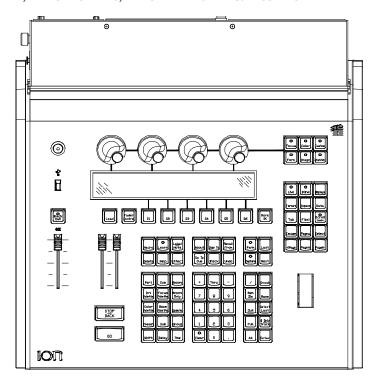



LIVE AND BLIND DISPLAYS

PRIMARY LIVE SCREEN (CHANNEL DISPLAY)

- Summary (Live Channels) or Live Table view
- Selected cue detail line
- Command line
- **[Format]** for summary or table view in Live
- Hold [Format] and move wheel to zoom in and out
 - Left button on mouse and use mouse wheel
- [Page ▲] or [Page ▼] scrolls full page at a time
- [Scroll Lock] when on, scrolls one line at a time
- Press and hold [Data] shows absolute data values behind any referenced or marked data. Also [Shift]&[Data] will lock the data view, [Shift]&[Data] again unlocks

BLIND

- Note the command line color change!
- Note the background change!
- Note the change at the top of the display
- [Next] and [Last] to preview cues or target
- When in Blind, Record is not required changes are stored when the command line is terminated.
- [Format] for summary, table view or spreadsheet in Blind

FLEXICHANNEL MODE

[Live] Hit [Go] once, then [1] [Thru] [3] [Full] [Enter], and [21] [Thru] [26] [At] [80] [Enter]

In Live, Flexi allows you to view only channels meeting a certain criteria, therefore removing unwanted data from view. Explore Flexi in other displays as there are many options depending on where you are located in the console.

Press [Flexi]


- All channels
- Patched channels
- Manual channels selected channels and/or any channels with manual data (red data)
- Show channels any channels currently active and/ or with data stored in a record target (cue, groups, suns, palettes...)
- Active channels any channels with intensity above 0 or fading to 0, running effects, or with non-intensity moves
- In Use Channels exactly like Flexi Active, but also includes dark channels that are marking for a future cue
- Selected channels the channels selected on the command line

Hold [Flexi] and use the softkeys

To include channels not in the current flexi mode, use [Thru] [Thru].

In Flexi Patched Channels: [16] [Thru] [21] [Enter]

Look in Flexi All Channels, you will see that only 16 and 21 are selected

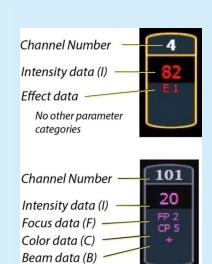

set some levels

changes to next flexi display

display options appear as softkeys

see the selected channels





PLAYBACK STATUS DISPLAY (PSD or CUE LIST):

- [Format] for selecting display options:
 - Single cue list area with a preview of 10 faders (fader ribbon)
 - Two cue lists as well as the fader ribbon
 - Expanded preview of pages of faders current status of all faders
- [Page ▲] or [Page ▼] scrolls the cue list up and down a full page
- [Next] or [Last] moves up and down through the cue list
- [Scroll Lock] when on, scrolls one line at a time
- If in another tab, [Shift]&[Page ▲] or [Page ▼] will page up and down
 in the PSD without needing to focus on that tab



CENTRAL INFORMATION AREA (CIA)

- Central Information Area
 - The default view is the parameter display and the browser
 - A number of different tools can be posted to the CIA.
- [Displays] will always draw focus to the item set as favorite
- Collapse and expand the CIA by pressing [**Displays**] again or using the triangle (\triangle , ∇)
- Double tap [Displays] will always bring up the browser.
- Use the **Lock** to prevent the CIA from being collapsed or viewed

BROWSER

- Can use mouse, touch or buttons to navigate in browser
- [Page ▲] [Page ▼] scrolls thru the menus
- [Page ▶] opens submenus
- [Page ◀] closes submenus or collapses the menu structure
- [Select] opens the item the 'Enter' of the browser area

Browser > File

FILE > NEW

[Displays], {Browser}, File > New > and press [Select] or double-click.

Do you really want to create a new show? [Select] or click {OK}. Show will be "untitled" until saved the first time.

FILE > OPEN

To open an existing or previously saved show:

[Displays], {Browser}, File > Open > Show File Archive > and scroll thru the list till you find the file you are looking for. Press [Select] or double-click.

Do you really want to open file? [Select] or click {OK}.

FILE > SAVE

To save the show you are working on:

[Displays], {Browser}, File > Save/Save As > and press [Select] or double-click.

Do you really want to save? [Select] or click {OK}.

If (untitled), "Enter new show name: Show File" appears above the virtual keyboard. Press [Label] to clear "Show File." Type a show name, then [Enter] on either console or keyboards.

When console saves the show, it makes a new copy of the file. Each show file has a date and time stamp in the show file name. Always have backup copies!

QUICK SAVE

Hold [Shift] and tap [Update]. Simple!

BROWSER COLOR CODING:

Save Green
Save As Green
Open Red
Merge Yellow
New Red
Clear Red

FILE > SAVE AS

For when you want to rename a show file that has already been saved or to save to an external media drive.

To rename the file on the hard drive:

[Displays], {Browser}, File > Save As > Show File Archive and press [Select] or double-click.

Do you really want to save? [Select] or click {OK}.

You now have the opportunity to rename the show file.

Backspace to clear the current name or press [Label] to clear any open label field.

Type a show name, then [Enter] on either console or keyboards.

To save to an external media drive:

Insert the thumb drive.

[Displays], {Browser}, File > Save As >, find the external device and press [Select] or double-click.

Do you really want to save? [Select] or click {OK}.

You now have the opportunity to rename the show file.

Hit [Enter] and that file will be saved to the thumb drive.

BROWSER > PRINT

Console prints to a PDF file on the hard drive or to an external media device. You can archive where you prefer or print out select pages as you need them.

TO FILE

[Displays], {Browser}, Print > To File >, find the external device and press [Select] or double-click.

By default, all show information is included in the print file. Portions can be deselected that are not to be included.

Do you really want to save? [Select] or click {OK}.

You now have the opportunity to rename the show file.

Hit [Enter] and the print file will be saved to the thumb drive.

Take it to your nearest printer and print what you need.



UNDO

The Command history is a list of all commands that have been executed since the file was opened or last saved. You can go back to a specific point and undo everything up to that point.

[UNDO]

A simple [Undo] [Enter] reverses the last command that was executed.

From an empty command line, [Undo] opens the command history.

Use [Page \triangle] to highlight back to the point that wants to be reversed. Press [Enter] and an advisory is posted. Press [Enter] again.

All highlighted commands are removed from the command history.

After using [Undo], {Redo} appears in the command history. Pressing **(Redo)** followed by **[Enter]** reverses the last undo to reinstate the removed commands.

Commands that are grayed out cannot be undone.



DISPLAY MANAGEMENT TOOLS


Several display management tools make the layout of your screens more efficient as your programming skills advance.



DISPLAY TAB NAVIGATION

Be aware of where *focus* is on the displays (tab highlighted in gold).

Live/Blind display is Tab 1. Playback Status display is Tab 2. Neither can be closed.



TO OPEN DISPLAYS

to either open the associated display or select it if it is already open

To Move Displays

Hold [Tab] and use the page arrow keys

to move the active display from one monitor to another

TO CLOSE DISPLAYS

Press [Tab] until desired display is highlighted then [Escape]

to close any tab display

TO SELECT OPEN DISPLAYS

Press [Tab] ... [Tab] ... [Tab]

to change focus from open display to the next open display

Press [Live] or [Blind]

to instantly bring Live/Blind into focus

{+} SIGN OR ADD-A-TAB

Press Add-a-Tab (the {+} sign) to the right of the tabs

opens the home screen or display and control options

LIVE AND BLIND CONFIGURATIONS

Right click or tap on the Live tab


to see configuration settings

You can also click on the Gear tab for the same options. These options vary depending on the tab in focus.

- {Close Tab}
- {Replace Tab} replace tab with a different tab
- {Close All Tabs But This}
- {Close All Tabs}
- {Lock Frame} prevents other tabs from being moved on to this screen
- {Zoom Out} and {Zoom In}

CONFIGURATION MENUS

- For displays that had configuration options in Setup, such as Live/ Blind and Playback Status, most of those options are now available from the display's tab.
- For displays that used a gear menu, such as Color Tools and the x25
 Direct Selects, those options are now available from the display's tab.

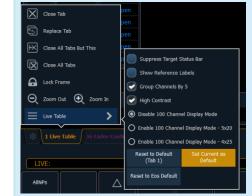

CLOSE ALL TABS

Hold [Shift] & press [Tab]	to close all tabs on a single screen
Hold [Shift] & press [Tab] [Tab]	to close all tabs but tabs 1 and 2 on all screens







DISPLAY LAYOUTS AND WORKSPACES

DISPLAY TOOLS

Press the icon in upper left hand corner of the display

Layout options give the ability to select different ways to split the screen. A screen can have up to four frames in its layout. Frames can have multiple tabs open.



Press the Displays Tool icon again

In the Options area, select the second icon to resize the frames

Use the arrows to choose how large or small the frame will be

Tap anywhere on the screen to exit frame sizing



All Display and Control tabs have fixed tab numbering. Patch will always be 12, Group List, 17. When you press **[Tab]** repeatedly, focus moves numerically through all open tabs on active workspaces.

Hold [Tab] & press [4]

Hold [Tab] & press [4.2]

WORKSPACES

A workspace might be made up of multiple frames with a selection of tabs that are task-specific. For each monitor, you can have up to three workspaces.

Use [Tab]&[Page ▲] or [Tab]&[Page ▼] to scroll through the workspaces on all monitors.

RESET OPTIONS

The Display Controls Screen also offers options for opening and closing tabs as well as resizing and resetting the monitor(s).

- Resize Frames In This Workspace opens resizing tools between frames of the workspace to adjust sizing as needed.
- Close All Tabs In This Workspace close all of the tabs in the active workspace on this monitor only.
- Reset This Display closes all of the tabs and frames and resets the layout for the active workspace to a single frame displaying the Home Screen
- Reset All Displays closes all of the tabs and frames on all monitors, resets all layouts to a single frame, and returns their workspaces to the Home Screen

After playing, use the Reset all Displays icon





moves focus to or opens a specified tab

opens a secondary tab



close all of the tabs and frames on *all* monitors



CHANNEL DISPLAY COLOR CONVENTIONS

CHANNEL OR PARAMETER LEVELS

• **Red** Manual Data - changes have been made but have not

been saved or stored yet

• **Green** Movement - channel values have gone down from

their previous level. Also used in reference marking to

indicate a channel is marked.

• Blue Movement - channel values are higher than in the

previous cue. Non-intensity parameters (NPs) are blue

when any move instruction has occurred.

• Magenta Tracking - value is unchanged from the previous cue

(tracked).

• White Values are blocked.

• Yellow Values are set from a submaster.

CHANNEL NUMBERS/CHANNEL HEADERS

White numberGray numberSelected channel numberUnpatched channel number

No graphic Deleted channel
 Bright White number Channel is parked

• Gold number Channel is captured (with a 'C')

• Gold outline Selected channel

"GREEN, GRASS...BLUE, SKY!"

CHANNEL NUMBERS/CHANNEL HEADERS	CHANNEL OR PARAMETER LEVELS
number – regular channel patched	Red – Manual Data
number – parked channel (small p)	Blue – Level is increasing from previous cue
Gray number – unpatched channel	Magenta – Level is tracked from previous cue
Gray number with no outline – deleted channel	Green – Level is decreasing from previous cue.
Gold number – channel is captured	– Level is blocked
Gold outline – Selected channel	Yellow – Level is set by Submaster

Patch

Press [Displays], then {S3 Patch} to get to the Patch display. Can also double tap [Address/Patch]. By default, patch is displayed in a channel view. You can change the display to sort by address by pressing [Format].



, , , , , , , , , , , , , , , , , , , ,	
PATCH BY CHANNEL	
[601] [At] [250] [Enter]	selects channel 601 and patches address 250 to it
[602] [At] [617] [Enter]	selects channel 602 and patches the address 617 to it
[603] [At] [2] [/] [106] [Enter]	selects channel 603 and patches the 2 nd universe address 106 to it
Press [Data]	displays all 3 channels in output address style. note blue text in upper left corner
Press [Data] again	displays all 3 channels in port/offset style. note blue text in upper left corner
Press [Data] again	returns to how it was originally entered
RANGE PATCHING	
[604] [Thru] [610] [At] [251] [Enter]	selects channel 604 thru 610 and patches address 251 thru 257 to them
[611] [At] [270] [Thru] [275][Enter]	selects channel 611, patches addresses 270 thru 275 to it, creates parts
[612] [Thru] [620] [At] [431] {Offset} [3] [Enter]	allows for a three-cell cyclight patch
CLEAR VS. UNPATCH VS. DELETE	
[601] [At] [0] [Enter]	removes the address, leaves type, etc.
[602] {Unpatch} [Enter] [Enter]	restores to default properties – removes address, type, label, etc.
[Delete] [603] [Enter] [Enter] or [603] [Delete] [Enter]	deletes the whole channel from show
[Live] and look at the Channel View (No Flexi)	
[Undo] last three commands [Enter]	to restore channels 601 - 603
PATCH BY ADDRESS	
Back in {Patch} and press [Format] to switch to 'By Address'	
[460] [At] [625] [Enter]	selects one address, 460, and patches it to channel 625 – note command line
[461] [Thru] [465] [At] [630] [Enter]	selects a range of addresses and patches them to one channel (parts)





Deale in (Datah) Du Channal Farmer	
Back in {Patch} - By Channel Format	
[651] [Thru] [656] [Enter]	selects the channels
Click on {Type} in the CIA area	notice two softkeys {Favorites} and {Manfctr}
Click on {Manfctr}	2 left columns show manufacturers; selecting a manufacturer repaints the rig columns with their devices
Find {Martin} in left columns, and then {Mac 250 Wash 16B} in right	notice Mac 250 Wash in blue – multiple modes available
Select {Mac 250 Wash 16B} for standard 16B mode	fixture placed on the command line after channels
[At] [2] [/] [411] [Enter]	patches all four fixtures with a starting address in universe 2
[At] [2] [/] [411] {Offset} [15] [Enter] [Enter]	now look at the addresses
ATCH A COMPOUND CHANNEL	
compound channel is a channel that controls more than one device - a deture with several accessories (such as a fixture with a color scroller, a aborotator, and so on).	
[641] [Thru] [645] [At] [2] [/] [111] [Enter]	patches the first part of channels - the dimmer
[Part] [2] [Enter]	creates a part 2 for selected channels
{Type}, {Manfctr}, {Generic}, find {Scroller}	makes part 2 a generic scroller giving the channel a color parameter
[At] [2] [/] [121] [Enter]	gives a starting address for all the part 2'
[Part] [3] [Enter]	creates a part 3 for selected channels
{Type}, {Rosco}, {Gobo Rotator}	makes part 3 a gobo rotator giving the channel a beam parameter
[At] [2] [/] [131] [Enter]	gives a starting address for all the part 3'
ATCH EXERCISE - SEE APPENDIX 1	
art a new show, [Displays], File> New> and press [Select] or double-click. re you sure? [Enter] or click on OK.	
ow, go to Appendix 1 – Channel Hookup in the back of the book and patch e entire hookup (Ignore Notes/labels).	
HANNEL/ADDRESS CHECK	
	quickly steps through all patched channe
[Live] [1] [Full] {Chan Check} [Enter] then [Next] [Next]	at 100%

!! DON'T FORGET TO SAVE AND SAVE OFTEN!

Quick Save: Hold [Shift] and tap [Update].

Working with Channels



SET CHANNELS IN LIVE	
[Live] if you are not already there	
[1] [+] [3] [At] [5] [Enter]	sets level of 50% (use [05] for 5%)
[31] [Thru] [45] [-] [37] [-] [39] [At] [65] [Enter]	using minus for individual channels
[51] [Thru] [56] [Full] [Enter]	using Full without [at]
[57] [Thru] [61] [Full] [Full]	another way to get Full
[62] [Thru] [67] [At] [At]	user-definable Level – change in Setup
[11] [+] [12] <enter> level wheel</enter>	proportional control
[21] [At] [50] [Enter] then [Shift]&[+], [Shift]&[-]	up a point, down a point (10% default)
[23] [At] [50] [Enter] then [At] [+] [3] , [At] [-] [4]	add 3 points more, subtracts 4 points
[At] [/] [50] [Enter] [At] [/] [400] [Enter]	takes 50% of current level, adds 400%
[51] [Thru] [67] [Out]	self-terminating
[51] [Thru] [67] [At] [10] [Thru] [Full] [Enter]	called fanning intensity
and roll the level wheel to full and then all the way out	notice proportional control
Offset	
Offset is a soft key, when pressed additional options are accessible	
[31] [Thru] [45] {Offset} {Even} [At] [80] [Enter]	selects even channels



[31] [Thru] [45] {Offset} {Even} [At] [80] [Enter]	selects even channels
[51] [Thru] [67] {Offset} [3] [At] [75] [Enter]	selects an offset of every third channel



SNEAK

Sneak uses timing established in Setup.

[4] [Sneak] [Enter]	restores selected channel to background state using default sneak fade time
[Clear] [Sneak] [Enter]	restores all manual levels to background states (Clear empties the command line)
[1] [Thru] [9] [At] [5] [Sneak] [Enter]	brings channel to level in default time
[5] [At] [25] [Sneak] [3] [Enter]	brings channel to level in 3 seconds
[9] [Full] [Sneak] [0] [Enter]	brings channels to full instantly
FLASH	channel humns from 15% to full and back

[2] {Flash} then [Next]{Last}	[Clear] to stop	channel bumps from 15% to full and back till command line is cleared
[2] [Shift] [&] [Out] [Shift] [&] [Full]		on or off while held



Groups

RECORDING GROUPS IN [LIVE]

[4] [Thru] [9] [Record] [Group] [1] [Enter]	records channels to the target group
[31] [+] [33] [+] [35] [+] [37] [Record] [Group] [2] [Enter]	records the selected channels to group 2
[1] + [4] + [2] + [5] + [3] [Record] [Group] [30] [Enter]	records the selected channels to group 30

WORKING WITH A GROUP

[Group] [1] [At] [Full] [Enter]	brings group 1's channels to Full
[Group] [30] [Enter] then press [Next] [Next] [Next] [Last] [Last]	accesses the group and then the first ordered channel in that group
[Select Last] [At] [30] [Thru] [Full] [Enter]	reselect the whole group and fan intensity

GROUP LIST [BLIND]

[Group] [Group] or Add-a-Tab (the {+} sign)	opens a list of all groups recorded
IGROUDI IGROUDI OF ADD-a-1ab (the (+) Sign)	opens a list of all groups recorded

CREATE A **G**ROUP

[Group] [3] [Enter] [27] [Thru] [30] [Enter]	[Label] Extras [Enter]	creates group 3 in the Group List
--	------------------------	-----------------------------------

EDIT A GROUP

[Group] [2] [Enter]	[+] [39] [Enter]	adds channel to a group
[Group] [1] [Enter]	[2] {Insert Before} [8] [Enter]	watch softkeys for additional options

DELETING GROUPS

deletes group 1 (2nd enter to confirm) [Delete] [Group] [1] [Enter] [Enter]

[Delete] [Group] [2] [Thru] [3] [Enter] [Enter]

deletes groups 2 and 3

Will still have Group 30 for later use

GROUP EXERCISE - CREATE THE FOLLOWING GROUPS:

Group #	Label	Channels
1	Specials	1 thru 3
2	Band	4 thru 9
3	Blue Sides	11 + 12
4	Pink Sides	13 + 14
5	Yellow Sides	15 + 16
6	Texture	21 thru 26
7	Top Lights	31 thru 45
8	LED Cyc	51 thru 67
11	Robin 300	101 thru 106
12	VL3500s	111 thru 115
30	Effect 1	1, 4, 2, 5, 3

No Group 9 or 10!



Working with NPs



Non-Intensity Parameter Control (FCB)

[Live] if you are not already there [Clear] [Sneak] [Enter]

FOUR MAJOR PARAMETER CATEGORIES:

- **Intensity** . . . Intensity
- Focus . . . Pan and Tilt
- Color. . . All color parameters (Scrollers, RGB, CMY, CTO, CTB...)
- **Beam** . . . All other parameters, divided into sub-categories:
 - Form includes parameters that affect the quality or size of the light output, such as edge, zoom, iris, frost, etc.
 - Image includes anything that drops into the gate and interrupts the beam of light, such as gobos, effects wheels, etc.
 - Shutter includes all of the framing parameters



ENCODERS AND LCD DISPLAY

The LCD displays the active category loaded, as selected by the category buttons. The category pages are displayed on the right of the LCD. The display will change based on the device selected.

- Press [Color] and then look at the LCD display; color scroller or CMY, RGB, Hue/Sat
- Press [Form] to see edge, iris, zoom, frost
- Press [Image] to see gobos, gobo rotate, effect wheels
- [Shutter] includes all of the framing devices for the luminaire
- [Custom] is used for devices with multiple intensity parameters

PAGING

[Group] [8] [Enter]

[Color] [Color] or [Color] & [2]	takes you to a page of Color category
Page number is displayed at top of touchscreen	
ENCODERS	
[113] [Full] [Enter]	to look at a multi-category fixture
[Focus] , Tilt up on stage, pan left and right	
[Color], bring cyan to full and out	

Hold an encoder down. LCD displays functions as softkeys:

- {Min} and {Max} allow you to send a parameter to its minimum or maximum limit with one press.
- {Home} ☆ allows you to set that parameter to its default position
- Similarly {Next} and {Last} step through one step at a time
- {Mode} allows you to switch between modes of a parameter (if any exist); for example, spin, rotate, index
- Coarse and Fine holding down [Shift] while using an encoder puts it in fine mode for as long as [Shift] is held down. Release [Shift] to return to coarse mode.

COLOR CONTROLS



COLOR CONTROL WITH SCROLLERS

[Group] [6] [Full] [Enter]

- Use the encoder to dial to the frame desired feel the clutch
- Press {Expand} and use the touchscreen string, {Collapse} to undo
- Hold [Shift] and dial the encoder see the '+/-' for half frames
- Tap the **{Color}** or the word **'Scroller'** on the touchscreen puts it on the command line then press **[11]** for frame 11 and **[Enter]**
- Go to [Displays] for the CIA tap the scroller tile on the left side of the CIA then press [9] for frame 9 and [Enter]
- Press **(Home \hat{\alpha}**} to take the scroller back to its starting frame

COLOR CONTROL WITH LEDS



The Parameter tiles in the CIA remap based on the channel or fixture type selected.

COLOR PICKER

Press [Displays] and select {Color Picker} from the softkeys or click on Adda-Tab (the {+} sign).

- When first opened, the CIE XY color space and the gel picker will open by default
- A white line represents the limit of a fixtures color capabilities. With multiple fixture types selected, the line is still displayed, but adapts based on fixtures selected.

REMOVED

GEL PICKER

Within the color picker, you will also see a row of buttons down the center with a scroll bar. Using these buttons, you are able to select a specific gel manufacturer and a specific color.

- Console will put fixture in the color as close as possible.
- A 'G' will appear in the channel display that means gel match
- Gel matches can be set from the command line also

[Group] [8] [Home] [Enter]

Tap {1 Apollo}, then find {AP1950} - a green	watch cyc change color
Tap {5 Rosco Roscolux}, then find {R027} - a red	watch cyc change color
[Group] [8] {Color} tile and [5] [/] [339] [Enter]	first # being the Gel library and second # being the gel number











ML Controls

There's always another way of doing things!

Click on Add-a-Tab (the {+} sign), in Displays section, select ML Controls

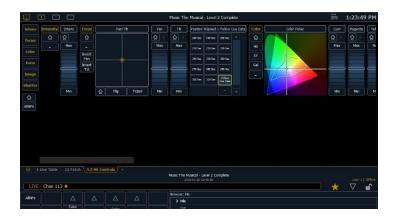

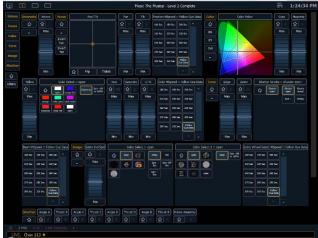

NAVIGATION AND OPERATION FEATURES

- Category shortcut keys on the left side to quickly access those controls
- Category and Parameter buttons will post to the command line
- Buttons to collapse or expand categories for yet more flexibility
- Home buttons allows you to home a specific parameter or attribute of a parameter.
- Virtual encoders (Click and hold close to the center line for slow movement, further away for faster movement.)
- Color picker and gel picker
- Scroll bar multiple rows of parameter will now display and you can scroll either horizontally or vertically depending on the frame

The parameters displayed will change based on the device(s) selected.

[1] [Enter]	shows just the intensity wheel
[21] [Enter]	shows intensity and color – note scroller, gel picker
[51] [Enter]	shows intensity and color – note RGB wheels
[113] [Enter]	shows intensity, focus, color and beam

Cues



RECORD A CUE

RECORD A CUE	
[Clear] [Sneak] [Enter] [Group] [1] [Full] [Enter]	set levels for specials
[Record] <cue> [1] [Enter]</cue>	stores cue 1 – note channels turn blue
[Group] [2] [-] [8] [-] [9] [At] [80] [Enter]	adds additional lights to look
[Record] [2] [Enter]	stores cue 2 – note channels colors
[1] [+] [3] [Out] [21] [Thru] [26] [At] [50] [Enter]	levels going up and down in cue
[Record] [Next] [Enter] *	stores next cue (3) – note channels colors
* When you use [Record] [Next], remember what cue number you are on. If Cue 1, then Next = 2. If Cue 2.7, then Next = 2.8. If Cue 2.11, then Next = 2.12 RECORD WITH TIME	
[Select Last] [Out], [Group] [7] [Full] [Enter]	selects channels that had been used
[Record] [4] [Time] [4] [Enter]	stores cue 4 with 4 second up/down time
[21] [Thru] [26] [Full] [RemDim] [Enter]	set levels using [Remainder Dim]
[Record] [5] [Time] [3] [Time] [7] [Enter] or [Time] [3] [/] [7] [Enter]	specifies split up/down times
RECORD WITH TIME AND LABEL	
[Group] [8] [Full] [Full], make blue [2] [Full] [Enter] [1] [Thru] [7] [-] [2] [At] [50] [Enter] [11] [+] [12] [Full] [Enter]	set levels then colors using basic encoders
[Record] [6] [Time] [2] [/] [4] [Label] Blue [Enter]	stores cue, timing and label
{Select Active} [Out]	takes all active channels out
[Record] [7] [Time] [0] [Label] B/O [Enter]	stores cue, timing and label
[1] [Thru] [3] [Full] [Enter]	creates new cue after blackout
[Record] [8] [Time] [2] [Enter]	stores cue and timing



DELETE A CUE

[Delete] [8] [Enter] [Enter] again to confirm deletes a cue

Now...Run the Cues!

Playback



BASIC PLAYBACK

[Go To Cue] [Out] [Enter]	resets the cue list to the top
Press [Go]	executes the pending cue
Press [Stop/Back] while a cue is running	fader activity is instantly stopped mid- transition
Press [Stop/Back] again	if cue stopped or complete, will play the previous cue
[Go] after [Stop/Back]	resumes the current cue

[Back] uses default timing established in Setup.

CONTROLLING PLAYBACK MANUALLY

By default, the main playback fader pair should be at the top of the run before pressing **[Go]** to play cues back as recorded.

To manually take control of the intensity fade from the beginning of the cue, set the sliders at the bottom of the run before you press [Go].



Go To CUE

[Go To Cue] uses go-to-cue timing established in Setup.

[Go To Cue] [Out] [Enter]	sets <u>all values</u> to home and resets <u>all cue</u> <u>lists</u> active on faders to the top of the list
[Go To Cue] [0] [Enter]	sets all current <u>intensity</u> values to zero and resets the current cue list to the top of the list, with the first cue pending
OTHER GO TO CUE FUNCTIONS	
[Go To Cue] [Enter]	refreshes current cue
[Go To Cue] [Next] or [Last] [Enter]	takes you to the next or previous cue in the active list (like Back)
[Go To Cue] [5] [Enter]	all parameters with values in cue 5 faded to those values, even if they are tracked
[Go To Cue] [4] [Time] [Enter]	fades to cue in the timing of the cue
[Go To Cue] [6] [Time] [2] [Enter]	fades to cue in 2 seconds
DAD A CUE ON THE MASTER PLAYBACK FADER	



[Cue] [7] [Load]	and then press [Go]	loads a specific cue to the main playback faders and then runs in that cue's time



CUE DELAY



30E BEB (1	
[Go To Cue] [Out] [Enter]	start with a clean stage
[3] [+] [13] [+] [14] [Full] [Full], [51] [Thru] [67] [At] [Full], in pink	set levels
[Record] [9] [Delay] [3] [Label] Pink [Enter]	stores cue with a 3 second delay on intensity
[3] [+] [13] [+] [14] [Out], [Group] [8] [Out], [1] [+] [23] [Full] [Enter]	set levels
[Record] [10] [Delay] [Delay] [4] [Enter] or [Delay] [/] [4] [Enter]	records cue with a 4 second delay on just the down time
[23] [Out] [51] [Thru] [67] [Full] [Enter] and in yellow [21] [Thru] [26] [Full] [Enter] and in Frame 2 or yellow	set levels
[Record] [11] [Time] [3] [Shift]&[Color] [Delay] [7] [Label] Yellow [Enter]	records cue with a 3 second upfade, and a 7 second delay on the color change
[Go To Cue] [7] [Enter] and press [Go], play thru the cues	watch for the different delays



CUE FOLLOW/HANG (AUTO-FOLLOWS)

Follow time begins the moment the cue is executed (when the go button is pressed.) Hang is similar but doesn't start till the cue is complete.

{FW/HG} is a soft key; can also press **[Shift]&[Delay]** to access Follow and **[Shift]&[Delay][Delay]** to access Hang

[Cue] [1] [Time] [3] [Enter] {Follow/Hang} [3] [Enter]	records cue with a follow time of 3 seconds
[Go To Cue] [0] [Enter] and press [Go]	watch the cue
[Cue] [2] [Time] [3] [Shift]&[Delay] [5] [Enter]	records cue with a follow time of 5 seconds
[Cue] [3] [Time] [3] {Follow/Hang} {Follow/Hang} [3] [Enter]	records cue with a hang time of 3 seconds
[Go To Cue] [Out] [Enter] and press [Go]	watch the cues play



CUE LINK/LOOP

Link allows cues to be run out-of-sequence.

Loop is a sequence of linked cues that plays a certain number of times.

oop is a sequence of linked cues that plays a certain number of times.	
[Cue] [4] {Link/Loop} [1] {Fw/Hg} [2] [Enter]	links to cue 1 from cue 4 with a 2 second follow time
[Cue] [4] {Link/Loop} {Link/Loop} [4] [Enter]	have it loop 4 times
[Go To Cue] [Out] [Enter] and press [Go]	watch the sequence – notice loop count
To indefinitely loop {Link/Loop} {Link/Loop} [0] [Enter]	loops the sequence indefinitely
Press [Go] at any time after first loop and will play cue 5	
[Cue] [4] {Link/Loop} [Enter]	to remove links <u>and</u> loops

TRACK/CUE ONLY/BLOCK

Go to [Blind], and press [Format] to get to Spreadsheet





TRACK

[Cue] [1] [Enter] [8] [At] [80] [Enter]	adds channel to cue 1 and tracks it right into our blackout cue
CUE ONLY	
[Cue] [1] [Enter] [9] [At] [40] [Q Only/Track] [Enter]	adds channel 9 to cue 1 and inserts a move to restore it to zero in Cue 2
[Cue] [1] [Thru] [3] [Enter] [9] [At] [40] [Q Only/Track] [Enter]	creates a move to 40 in first cue, tracks through and adds a move to zero in last cue
[Cue] [8] [Enter] [Enter]	creates a new cue after the blackout that channel 8 tracks thru
Blocks can be applied at a cue level, a channel level or a parameter level. A block is an editing tool that prohibits changes upstream from tracking into the blocked cue/data.	
[Cue] [7] [Block] [Enter] Channel 8 is white (channel blocked)	applies a block to the blackout cue
"B" is displayed in the flags field of the PSD, indicating a cue level block.	
[Cue] [1] [Enter] [10] [At] [80] [Enter]	adds channel to cue 1 and tracks it till it reaches the block in cue 7
[Cue] [7] [Enter] [Select Active] [Out]	assures any lights on are set to zero as this is our blackout cue



CHECK OUT THE BOBBLEHEAD FRED VIDEO THAT HELPS TO EXPLAIN THE DIFFERENCE IN STYLE OF OPERATION BETWEEN TRACKING AND PRESET CONSOLES AND THEIR ORIGINS.

discuss what happens

AUTOBLOCK		
	a move instruction when a level upstream is	
[Cue] [1] [Enter]	[4] [At] [80] [Enter]	Autoblock created in cue 2
white, with an underso	ne intensity level for channel 4 is now displayed in ore. This is the Autoblock, where the console is at this channel previously had a move instruction.	
Autoblocks are displaye	ed in the PSD by a "b".	
CLEAR AN AUTOBLOCK		
[Cue] [2] [Enter]	[Block] [Enter] [Block] [Enter]	clears an autoblock
and treats it like a move ownership of a channer on a light that is still far. Asserts can be placed as	equivalent of a block – in that it takes a tracked value we instruction. Asserts are a way to regain el, or to force a new move command with new timing ding from a previous instruction. In a cue level, channel or parameter level.	
[25] [At] [Full] [Rem	Dim] [Enter]	set levels
[Record] [6.5] [Time] [30] [Enter]		stores cue with long fade time
[Go To Cue] [6] [Ent	er] Run the cues, watch the fades	
Start cue 7 before	cue 6.5 has completed	discuss what happens
[Cue] [7] [Assert] [Enter]		applies an Assert on the cue

Notice an "A" in the PSD flag field for Cue 7

[Back] [Back] [Go] on 6.5 then [Go] on 7



Submasters



RECORD SUBMASTER IN LIVE	
[Go To Cue] [Out] [Enter]	start with a clean stage
[Group] [1] [At] [Full] [Enter]	set levels
[Record] [Sub] [1] [Enter] Press both buttons (Load) of a fader	records the current stage state to sub 1
[Clear] [Sneak] [Enter]	
[Group] [8] [Full] [Enter] and in Blue, [2] [+] [11] [+] [12] [Full] [Enter]	set levels
[Record], then both buttons (Load) of the next fader	loads the fader with the submaster
[Clear] [Sneak] [Enter]	
[Recall From] [Cue] [9] [Enter]	set levels
[Record] [Sub] [3] [Label] Pink [Enter]	with a label
then press both buttons (Load) of the third fader	and loads it to the fader – notice label
[Clear] [Sneak] [Enter]	
Submasters may be loaded to any fader as long as it is blank or clear. NowLet's look at our subs! Run each fader up and down	
RECORD SUBMASTER IN BLIND	
[Blind] [Sub] [31] [Enter] [21] [Thru] [26] [Full] [Enter]	records values to sub 31 – in Blind
COMMAND LINE CONTROL OF SUBMASTERS	
[Live] [Sub] [31] [At] [50] [Enter] [At] [Full] [Enter]	brings sub 31 to 50% or to Full
[Sub] [31] [At] [85] [Sneak] [Enter]	sneaks sub 31 to 85% in default sneak time
[Sub] [31] [Out] [Enter]	takes sub 31 out regardless of fader position
Change Fader Pages	
Fader pages are set up in increments of 10. There are 100 pages of 10.	
Press and hold [Fader Controls]	shows page numbers on wing display
Press the lower bump button of the fader that denotes page 3	

loads fader 31 on page 2

[Sub] [31] [Load] to any fader on page 2 and bring up the fader





CLEAR FADERS

If a submaster (or a cue list) already occupies the fader, that fader must be cleared before another submaster or cue can be loaded.

Press and hold [Fader Controls]

If you need to go back to page 3

Press the lower bump button of the fader that denotes page 3

Hold [Shift] and press both buttons (Load) of the fader to clear sub 31



DELETE SUBMASTERS

[Delete] [Sub] [3] [Enter] [Enter] deletes the contents of sub 3

[Delete] [Sub] [1] [Thru] [Enter] [Enter] deletes the contents of all subs 1 – 300

If you delete the subs, you will need to recreate subs for the next exercises. Or use **[Undo]**.



TIMING ON SUBMASTERS

Changes can be done in Live or in Sub List. Uses bump button as the GO.

Hold [Fader Controls] and press page 1	back to page 1
[Sub] [1] [Time] [3] [Time] [4] [Time] [3] [Enter]	adds a 3 sec upfade, holds for 4 sec and 3 sec down fade
Press the bump button of fader 1 just once	fades up, holds, then fades down
Hold	
[Sub] [1] [Time] [Time] {Hold} [Enter]	changes the dwell time to 'hold'
Can also just type [Sub] [1] {Hold} [Enter]	another way to add a 'hold' time
Press the bump button to start the upfade	fades up, holds indefinitely
Press the bump button to start the downfade	fades down

RESTORE TO DEFAULT TIME

[Sub] [1] [Time] [Enter] resets to default times (0/Man/0)



BMASTER LIST	
[Sub] [Sub] or Add-a-Tab (the {+} sign)	opens the submaster list - use the softkey for selection and editing
Percent (%)	
The list shows the current level in Live of each submaster.	
LABEL	
[Sub] [1] [Label] Special [Enter]	displayed in List as well as Sub displays
Mode: Additive, Inhibitive, or Effect Sub	
Mode has 3 options, the first is the default and that mode is Additive (contributes to the live output). Inhibitive (limits live output) restricts the values as the fader comes down. It acts as a mini grand master for the contents of the sub. The final mode is Effects Sub .	
[Sub] [1] {Inhibitive} fader will go to Full, LED turns red	makes sub 1 an inhibitive sub
Live: [Go To Cue] [1] [Enter]	runs the cue with specials
Slowly bring the fader out.	specials go out - notice small 'l' in channel display
[Go To Cue] [Out] [Enter]	
MASTER: INTENSITY MASTER OR PROPORTIONAL	
Proportional submasters control all contents of the submaster (intensity and non-intensity parameters). (DEFAULT)	
[Group] [11] [Full], tilt up on cyc	
[Record] [Sub] [10] [Enter] Load to a fader [Clear] [Sneak] [Enter]	
Then bring fader up, see live changes Bring fader down	shows proportional control of contents
Intensity masters control intensity only. The bump button is used to preset (mark and unmark) non-intensity parameters.	
[Sub] [10] {Properties} {I-Master}	toggles the submaster to I-Master
With fader down, press the bottom bump button, LED flashes	marks the non-intensity parameters
Bring fader up	now shows Intensity control only
Bring fader down and tap bottom bump button	Unmarks (resets) non-intensity paramete
If the bump button is not pressed, as fader is moved, non-intensity parameters moved into positions as fast as possible and the rest of the fade will be intensity only.	
There is an option in Properties called Unmark at 0. The contents of the submaster will automatically be released when the fader reaches 0%.	
EXCLUSIVE	
When set as Exclusive, the contents of the submaster cannot be stored into any record targets (similar to [-] [Sub] [Record]).	
[Sub] [2] {Properties}, under Exclusive, {On}	makes the submaster Exclusive





Park

Park locks the value of a channel or address.

- It cannot be changed by any console operation. It can't be affected by subs, playbacks, Grand Master or Blackout key.
- Parked values won't be recorded.

PARK IN LIVE

[1] [At] [50] [Park] [Enter]	parks channel at 50%
[101] [Park] [Enter]	parks all parameters at current levels
[102] [Intensity] [Park] [Enter]	parks the intensity of the channel at its current level
[Address/Patch] [31] [At] [75] [Park] [Enter]	parks address at 75%
Notice in the upper right corner of the display "Parked Channels."	
Any parked channel has a small "P" visible on the channel icon.	
TO CLEAR A PARK COMMAND:	
[1] [Park] [Enter][Enter]	unparks channel
[Park] [Enter][Enter]	clears all parked channels
[Address/Patch] [Park] [Enter][Enter]	clears all parked addresses
PARK DISPLAY (BLIND)	
[Park] [Park] or Add-a-Tab (the {+} sign)	opens the Park display
[2] [At] [85] [Enter]	parks channel at 85%
[Address/Patch] [32] [At] [75] [Enter]	parks address at 75%
Notice the Park key is not necessary for parking in Blind.	
TO CLEAR A PARK COMMAND:	
[2] [Park] [Enter][Enter]	unparks channel
{Address} [32] [At] [Enter] [Enter]	unparks an address



[Displays] {Setup} or click in Browser, on Setup. Two major areas are:

- Show
- Desk

Show — Specific to the current show file — stays with Show

These settings are shared on all consoles on the network.

•	Show Settings	Number of Channels, Dimmer Doubler Offset, Partitioned Control, Home Preset, Auto-Mark Enable, Mark Time, Create Virtual HSB, Startup, Shutdown and Disconnect Macros, and Preheat Time
•	Cue Settings	Cue Default Times
•	Show Control Partitions	SMPTE, MIDI, MSC, Analog/Serial, UDP, OSC Channel Partitions for multi-user setups



DESK — SPECIFIC TO THE DESK/HARDWARE — STAYS WITH DESK

These settings are for each independent console – the hardware.

•	Record Defaults	Auto Playback, Track Mode, Record/Delete
		Confirm, Update Modes, Emergency Mark
•	Manual Control	Manual Times, Preserve Blind Cue, Level,
		Plus/Minus %, Hi-light and Lowlight Presets,
		Highlight RemDim, Live RemDim Level, Sneak,
		Back, Go To Cue, Assert, Off, Release and
		Timing Disable Times
•	Face Panel	Sounds, Encoders Adjustments – Percent or
		Degrees Per Revolution
•	Face Panel Keypad	Auto Repeat settings, Spacebar [Go] Enable,
		Hide Mouse
•	Displays	Direct Select Double Click, User ID, Cell Editing
•	PDF File Settings	Orientation and Paper Type settings
•	Brightness Settings	Brightness & Contrast for console LCDs and
		Backlit buttons as well as Desk Lamp Control
		and Wing LCDs
•	Fader Wing Config	Layout and Identify
•	RFR Settings	Allow RFR Connection – all remotes: iRFR or
		aRFR
•	Trackball Settings	Adjustments for Trackball

stops effect if manual data - not recorded

will stop the specified running effect

will stop all running effects

An Intro to Effects opens the effects list [Effect] [Effect] Effects 901 through 918 are preprogrammed effects **CREATING A STEP-BASED EFFECT** creates a new effect number [Effect] [1] [Enter] <Type> {Step-based} assigns the effect as a step effect defines the number of steps {Step} [1] [Thru] [5] [Enter] [Enter] [Page ▶] to the Channel column specifies the channels or group to be used [Group] [30] [Enter] Intensity is assumed unless another parameter is specified **RUN THE EFFECT** recalls the effect created on group 30 [Live] [Group] [30] [Effect] [1] [Enter] to view levels as effect is running If in Live Table View, press and hold [Data] **EFFECT ATTRIBUTES** With the effect running, you can play with various attributes of the effect to see how they alter your effect. opens the effects list [Effect] [Effect] resets overall effect time/speed {Cycle Time} [3] [Enter] or dial the encoder to adjust cycle time opens table of various attributes Click on {Attributes} The basic behavior of the effect can include forward, reverse, bounce, positive, negative, and random grouping or random rate. STEP EDITING Remember you can edit steps individually. Just select the steps that you wish to change then press [Page ▶] to access "Step time," "Dwell Time," "Decay Time," the "On" and "Off" State columns. MULTIPLE WAYS TO STOP AN EFFECT stops the effect running on channels [1] [Thru] [5] [Effect] [Enter]



[Sneak] [Enter]

[Stop Effect] [1] [Enter]

[Stop Effect] [Enter]

OR [Fader Control] {Stop Effect} [Enter]



A SIMPLE COLOR EFFECT USING A PRE-PROGRAMMED COLOR EFFECT [Live] sets starting levels [Group] [8] [Full] [Enter], make it blue applies existing effect to selected channels [Group] [8] [Effect] [917] [Enter] Effect 917 is a Rainbow Effect for RGB fixtures. FUN WITH THE COLOR PICKER Visually see the effect running in the blue area. opens the color picker [Displays] {S2 -Color Picker} watch cyc change colors Click on various colors in the color picker **STOPPING AN EFFECT** stops effect from running [Live] [Group] [8] [Effect] [Enter] or just [Sneak] [Enter] stops effect 914 OR [Effect] [917] [At] [Enter] OR [Group] [8] [Effect] [At] [Enter] stops all effects on selected channels

stops all effects



For step-based and absolute effects, you can set the beats per minute (BPM). For step-based effects, BPM affects the step times and for absolute effects, this affects the time/dwell.	
[Live]	jump back into Live
[1] [Thru] [4][Effect] [1] [Enter]	runs effect 1 on the selected chan
OR with a clear command line, [Recall From] [Effect] [1] [Enter]	runs effect 1 on all of the channel originally used in creation
DIRECTLY SETTING BPM	
Done in Blind, changes applied immediately to all instances of this effect.	
[Effect] [Effect] [1] should be on command line	make sure you are in Effect 1
Softkey {BPM} [200]	sets the BPM of the effect to 200
Notice BPM is posted in the Effect Editor to the far right of the Effect number. Also notice changes to Step times and Cycle time.	
{Cycle Time} [2] [Enter]	removes the BPM
LEARNING BPM OR TAP RATE	
Done in Live, changes will need to be recorded.	
[Live] [Clear] [Sneak] [Enter]	jump back into Live
[Group] [30] [Full] [Enter] [Effect] [1] [Enter] [Effect] [1] [Enter]	runs effect 1 on the selected chan
[Clear]	to clear the command line
[Effect] [1] [Learn] [Time]	opens the effect editor display
Notice "Effect 1 Learn Time Sample BPM" on the command line. Also opens the Effects Editor display	
[Enter] [Enter]	averages the timing or tap rate of three hits of Enter
[Learn]	stops the Learn mode or averaging
Notice the red BPM to the far right of the Effect number.	

Important Concepts

Eos family consoles are Tracking Move-Fade systems.

TRACKING VS. CUE ONLY

Eos family consoles are tracking by default. This means two things. First, tracking relates to how cue lists are created. Once data is in a cue list, it will remain a part of that cue list, at its original setting, and track forward through subsequent cues, until a new instruction is provided.

Secondly, tracking relates to how changes to cue data are handled. Unless otherwise instructed by a Cue Only command, changes to a parameter in a cue will track forward through the cue list until a move instruction (or block command) is encountered. It is possible to change the default setting of the console to "Cue Only". This prevents changes from tracking forward into subsequent cues, unless overridden with a track instruction.

The console also has a [Cue Only/Track] button that allows the user to record or update a cue as an exception to the default setting. Therefore, if the console is set to Tracking, the button acts as Cue Only. If console is set to Cue Only, it behaves as a Track button.

EXAMPLE: IN BLIND > SPREADSHEET

[Cue] [1] [Thru] {Thru] [5] [Enter] [Enter]	creates cues 1 - 5
[Cue] [1] [Enter]	selects cue 1
[1] [Thru] [4] [Full] [Enter]	see channels fill through subsequent cues
[Cue] [3] [Enter]	selects cue 3
[1] [+] [2] [At] [50] [Enter]	see channel levels change in that cue and track on
[Cue] [4] [Enter]	selects cue 4
[3] [+] [4] [At] [50] [Cue Only] [Enter]	see channel levels change in that cue only

MOVE FADE

Move Fade is a lighting control concept that determines how cues are played back. Eos family consoles adhere to this philosophy. In a Move Fade system, parameters do not change from their current setting until they are provided a move instruction in a cue or are given a new instruction manually.

For example, in cue 1, channel 1 has been given an intensity value of 50%. This value does not change until cue 20, where channel 1 is moved to 100%. Therefore, channel 1 has a tracked intensity value of 50% in cues 2-19. If the user applies a manual intensity value of 25% while sitting in cue 5 (for example), that channel will stay at 25% until Cue 20 is played back - because 20 is the next cue in which channel 1 has a move instruction. The original intensity of 50% will not be reapplied in subsequent cues unless the cue is asserted or run out of sequence via go to cue or by loading the cue into pending manually.

HTP vs. LTP

HTP (Highest-Takes-Precedence) and LTP (Latest-Takes-Precedence) are terms used to define the output of a channel parameter that is receiving data from multiple sources. In HTP, the highest level of all sources will be output to the rig. In LTP, the most recent level received will be output. Cue lists and submasters can operate as HTP or LTP for intensity parameters only. Non-intensity parameters (NPs) are always LTP. The console's default cue list setting for intensity is LTP. The default submaster setting for intensity is HTP.

HTP

HTP is only applicable to the intensity of a channel. HTP channels will output the level that is the highest of all control inputs. As control inputs are removed (some of the submasters are brought down to zero), the console will adjust the channel level, if required, to the highest remaining level.

LTP

LTP is applicable to any parameter of any channel. LTP output is based on the most recent move instruction provided to the channel parameter. Any new values sent will supersede any previous values, regardless of the level supplied. The console determines the LTP value for a channel, which is overridden by any HTP input values that are higher than the LTP instruction. This is then finally modified by manual override.

BLOCK

Block is a Recording/Updating function - it defines how changes will track (or not) through the cue list. An important concept to remember is that blocking impacts editing functions only. It has no impact on cue playback. In Element, block does impact playback, as it also acts as an assert.

A cue level block causes all tracked values in the cue to be treated as move instructions, which prohibits any data changes from tracking into the cue. Blocks can also be applied to a channel or a channel parameter.

Eos family consoles also support an "auto-block" function. For example, in cue 5 you set channel 1 to 50%. It is stored as a move instruction. Then, you later go back to an earlier cue and set channel 1 to 50% and it tracks forward to cue 5. Channel 1 will be "auto-blocked" in cue 5. Even though it is now at the same value as the previous cue, the original concept of a move instruction is maintained. Auto blocks are indicated with an underscore in the cue data.

ASSERT

Assert is analogous to block, but is a Playback function - it defines how the cues interact with each other in regard to the concepts of Move Fade.

Assert may be used to override this default behavior, allowing a cue list's control over a channel to be restored, even when the channel's data is tracked.

Assert is not only used in multiple cue list environments, it is useful in single list as well, as it is a way to force a tracked value to act as a move instruction on playback. Assert can be placed on a cue list, a cue, a channel or a parameter.

Example:

Cue 10 is a blackout on a time of 0. Cue 9 starts some of the lights fading to zero. You run cue 10 before cue 9 is finished. Because some of the levels were already commanded to zero in cue 9, they will continue to run in cue 9's time as they are not getting a new move instruction in cue 10. To get them to use cue 10's time, you have to place an assert on cue 10 (blocking cue 10 will not do this).

NOTE: ALWAYS, ALWAYS, ALWAYS BLOCK AND ASSERT YOUR BLACKOUT CUES!

Appendix 1 – Level 1 Channel Hookup

Channel	Universe	Address	Manufacturer	Туре	Focus/Notes
1	1	1	Generic	Dimmer	Special - DSR Desk
2	1	2	Generic	Dimmer	Special - USC Solo
3	1	3	Generic	Dimmer	Special - DSL Study
4	1	4	Generic	Dimmer	Special - Piano
5	1	33	Generic	Dimmer	Special - Drums
6	1	31	Generic	Dimmer	Special - Vocals
7	1	32	Generic	Dimmer	Special - Guitar
8	1	35	Generic	Dimmer	Special - Piano Top Light
9	1	34	Generic	Dimmer	Special - Drums Top Light
11	1	5, 6, 7	Generic	Dimmer	High Side SR - Blue
12	1	8, 9, 10	Generic	Dimmer	High Side SL - Blue
13	1	11, 12, 13	Generic	Dimmer	High Side SR - Pink
14	1	14, 15, 16	Generic	Dimmer	High Side SL - Pink
15	1	17, 18, 19	Generic	Dimmer	High Side SR - Yellow
16	1	20, 21, 22	Generic	Dimmer	High Side SL - Yellow
21	1	23	Generic	Dimmer	Texture Wash
21 P2	1	71	Generic	Scroller	Scroller w/ custom load
22	1	24	Generic	Dimmer	Texture Wash
22 P2	1	72	Generic	Scroller	Scroller w/ custom load
23	1	25	Generic	Dimmer	Texture Wash
23 P2	1	73	Generic	Scroller	Scroller w/ custom load
24	1	26	Generic	Dimmer	Texture Wash
24 P2	1	74	Generic	Scroller	Scroller w/ custom load
25	1	27	Generic	Dimmer	Texture Wash
25 P2	1	75	Generic	Scroller	Scroller w/ custom load
26	1	28	Generic	Dimmer	Texture Wash
26 P2	1	76	Generic	Scroller	Scroller w/ custom load
31	1	101	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
32	1	110	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
33	1	119	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
34	1	128	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
35	1	137	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
36	1	146	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
37	1	155	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
38	1	164	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
39	1	173	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
40	1	182	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
41	1	191	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
42	1	200	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
43	1	209	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
44	1	218	ETC Fixtures	D40 Lustr+ Direct Str	Top Light
45	1	227	ETC Fixtures	D40 Lustr+ Direct Str	Top Light

51 2 52 Philips Color Kinetics ColorBlast 12 Cyc Top 52 2 55 Philips Color Kinetics ColorBlast 12 Cyc Top 53 2 58 Philips Color Kinetics ColorBlast 12 Cyc Top 54 2 61 Philips Color Kinetics ColorBlast 12 Cyc Top 55 2 64 Philips Color Kinetics ColorBlast 12 Cyc Top 56 2 67 Philips Color Kinetics ColorBlast 12 Cyc Top 57 2 70 Philips Color Kinetics ColorBlast 12 Cyc Top 58 2 73 Philips Color Kinetics ColorBlast 12 Cyc Top 60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast	Channel	Universe	Address	Manufacturer	Туре	Focus/Notes
53 2 58 Philips Color Kinetics ColorBlast 12 Cyc Top 54 2 61 Philips Color Kinetics ColorBlast 12 Cyc Top 55 2 64 Philips Color Kinetics ColorBlast 12 Cyc Top 56 2 67 Philips Color Kinetics ColorBlast 12 Cyc Top 57 2 70 Philips Color Kinetics ColorBlast 12 Cyc Top 58 2 73 Philips Color Kinetics ColorBlast 12 Cyc Top 60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast	51	2	52	Philips Color Kinetics	ColorBlast 12	Сус Тор
54 2 61 Philips Color Kinetics ColorBlast 12 Cyc Top 55 2 64 Philips Color Kinetics ColorBlast 12 Cyc Top 56 2 67 Philips Color Kinetics ColorBlast 12 Cyc Top 57 2 70 Philips Color Kinetics ColorBlast 12 Cyc Top 58 2 73 Philips Color Kinetics ColorBlast 12 Cyc Top 59 2 76 Philips Color Kinetics ColorBlast 12 Cyc Top 60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast	52	2	55	Philips Color Kinetics	ColorBlast 12	Сус Тор
55 2 64 Philips Color Kinetics ColorBlast 12 Cyc Top 56 2 67 Philips Color Kinetics ColorBlast 12 Cyc Top 57 2 70 Philips Color Kinetics ColorBlast 12 Cyc Top 58 2 73 Philips Color Kinetics ColorBlast 12 Cyc Top 59 2 76 Philips Color Kinetics ColorBlast 12 Cyc Top 60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast 12 Cyc Top 67 2 100 Philips Color Kinetics ColorBlas	53	2	58	Philips Color Kinetics	ColorBlast 12	Сус Тор
56 2 67 Philips Color Kinetics ColorBlast 12 Cyc Top 57 2 70 Philips Color Kinetics ColorBlast 12 Cyc Top 58 2 73 Philips Color Kinetics ColorBlast 12 Cyc Top 59 2 76 Philips Color Kinetics ColorBlast 12 Cyc Top 60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast 12 Cyc Top 66 2 97 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301 Robe Robin 300 LEDWash – M3 <td>54</td> <td>2</td> <td>61</td> <td>Philips Color Kinetics</td> <td>ColorBlast 12</td> <td>Сус Тор</td>	54	2	61	Philips Color Kinetics	ColorBlast 12	Сус Тор
57 2 70 Philips Color Kinetics ColorBlast 12 Cyc Top 58 2 73 Philips Color Kinetics ColorBlast 12 Cyc Top 59 2 76 Philips Color Kinetics ColorBlast 12 Cyc Top 60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast 12 Cyc Top 66 2 97 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301* Robe Robin 300 LEDWash – M3 102 1 321 Robe Robin 300 LEDWash – M3 <t< td=""><td>55</td><td>2</td><td>64</td><td>Philips Color Kinetics</td><td>ColorBlast 12</td><td>Сус Тор</td></t<>	55	2	64	Philips Color Kinetics	ColorBlast 12	Сус Тор
58 2 73 Philips Color Kinetics ColorBlast 12 Cyc Top 59 2 76 Philips Color Kinetics ColorBlast 12 Cyc Top 60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast 12 Cyc Top 66 2 97 Philips Color Kinetics ColorBlast 12 Cyc Top 67 2 100 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301* Robe Robin 300 LEDWash – M3 102 1 321 Robe Robin 300 LEDWash – M3 <	56	2	67	Philips Color Kinetics	ColorBlast 12	Сус Тор
59 2 76 Philips Color Kinetics ColorBlast 12 Cyc Top 60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast 12 Cyc Top 66 2 97 Philips Color Kinetics ColorBlast 12 Cyc Top 67 2 100 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301* Robe Robin 300 LEDWash – M3 102 1 321 Robe Robin 300 LEDWash – M3 104 1 361 Robe Robin 300 LEDWash – M3 105 1	57	2	70	Philips Color Kinetics	ColorBlast 12	Сус Тор
60 2 79 Philips Color Kinetics ColorBlast 12 Cyc Top 61 2 82 Philips Color Kinetics ColorBlast 12 Cyc Top 62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast 12 Cyc Top 66 2 97 Philips Color Kinetics ColorBlast 12 Cyc Top 67 2 100 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301* Robe Robin 300 LEDWash – M3 Robe 102 1 321 Robe Robin 300 LEDWash – M3 Robin 300 LEDWash – M3 104 1 361 Robe Robin 300 LEDWash – M3 Robin 300 LEDWash – M3 105 1 381 Robe Robin 300 LEDWash	58	2	73	Philips Color Kinetics	ColorBlast 12	Сус Тор
61	59	2	76	Philips Color Kinetics	ColorBlast 12	Сус Тор
62 2 85 Philips Color Kinetics ColorBlast 12 Cyc Top 63 2 88 Philips Color Kinetics ColorBlast 12 Cyc Top 64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast 12 Cyc Top 66 2 97 Philips Color Kinetics ColorBlast 12 Cyc Top 67 2 100 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301* Robe Robin 300 LEDWash – M3 Cyc Top 102 1 321 Robe Robin 300 LEDWash – M3 Robin 300 LEDWash – M3 103 1 341 Robe Robin 300 LEDWash – M3 Robin 300 LEDWash – M3 105 1 381 Robe Robin 300 LEDWash – M3 106 1 401 Robe Robin 300 LEDWash – M3 111 3 1 VariLite VL3500 Spot – VL3500 Spot FOH	60	2	79	Philips Color Kinetics	ColorBlast 12	Сус Тор
63	61	2	82	Philips Color Kinetics	ColorBlast 12	Сус Тор
64 2 91 Philips Color Kinetics ColorBlast 12 Cyc Top 65 2 94 Philips Color Kinetics ColorBlast 12 Cyc Top 66 2 97 Philips Color Kinetics ColorBlast 12 Cyc Top 67 2 100 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301* Robe Robin 300 LEDWash – M3 102 1 321 Robe Robin 300 LEDWash – M3 103 1 341 Robe Robin 300 LEDWash – M3 104 1 361 Robe Robin 300 LEDWash – M3 105 1 381 Robe Robin 300 LEDWash – M3 106 1 401 Robe Robin 300 LEDWash – M3 111 3 1 VariLite VL3500 Spot – VL3500 Spot FOH 112 3 32 VariLite VL3500 Spot – VL3500 Spot FOH 113 3 63 VariLite VL3500 Spot – VL3500 Spot FOH <td>62</td> <td>2</td> <td>85</td> <td>Philips Color Kinetics</td> <td>ColorBlast 12</td> <td>Сус Тор</td>	62	2	85	Philips Color Kinetics	ColorBlast 12	Сус Тор
65	63	2	88	Philips Color Kinetics	ColorBlast 12	Сус Тор
66 2 97 Philips Color Kinetics ColorBlast 12 Cyc Top 67 2 100 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301* Robe Robin 300 LEDWash – M3 102 1 321 Robe Robin 300 LEDWash – M3 103 1 341 Robe Robin 300 LEDWash – M3 104 1 361 Robe Robin 300 LEDWash – M3 105 1 381 Robe Robin 300 LEDWash – M3 106 1 401 Robe Robin 300 LEDWash – M3 111 3 1 VariLite VL3500 Spot – VL3500 Spot FOH 112 3 32 VariLite VL3500 Spot – VL3500 Spot FOH 113 3 63 VariLite VL3500 Spot – VL3500 Spot FOH 114 3 94 VariLite VL3500 Spot – VL3500 Spot FOH	64	2	91	Philips Color Kinetics	ColorBlast 12	Сус Тор
67 2 100 Philips Color Kinetics ColorBlast 12 Cyc Top 101 1 301* Robe Robin 300 LEDWash – M3 102 1 321 Robe Robin 300 LEDWash – M3 103 1 341 Robe Robin 300 LEDWash – M3 104 1 361 Robe Robin 300 LEDWash – M3 105 1 381 Robe Robin 300 LEDWash – M3 106 1 401 Robe Robin 300 LEDWash – M3 107 Total Robe Robin 300 LEDWash – M3 108 Total Robe Robin 300 LEDWash – M3 109 Total Robe Robin 300 LEDWash – M3 100 Total Robe Robin 300 LEDWash – M3 100 Total Robe Robin 300 LEDWash – M3 101 Total Robe Robin 300 LEDWash – M3 102 Total Robe Robin 300 LEDWash – M3 103 Total Robe Robin 300 LEDWash – M3 104 Total Robe Robin 300 LEDWash – M3 105 Total Robe Robin 300 LEDWash – M3 106 Total Robe Robin 300 LEDWash – M3 107 Total Robe Robin 300 LEDWash – M3 108 Total Robe Robin 300 LEDWash – M3 109 Total Robe Robin 300 LEDWash – M3 110 Total Robe Robin 300 LEDWash – M3 111 Total Robe Robin 300 LEDWash – M3 112 Total Robe Robin 300 LEDWash – M3 113 Total Robe Robin 300 LEDWash – M3 114 Total Robe Robin 300 LEDWash – M3 115 Total Robe Robin 300 LEDWash – M3 116 Total Robe Robin 300 LEDWash – M3 117 Total Robe Robin 300 LEDWash – M3 118 Total Robe Robin 300 LEDWash – M3 119 Total Robe Robin 300 LEDWash – M3 110 Total Robe Robin 300 LEDWash – M3 111 Total Robe Robin 300 LEDWash – M3 112 Total Robe Robin 300 LEDWash – M3 113 Total Robe Robin 300 LEDWash – M3 114 Total Robe Robin 300 LEDWash – M3 115 Total Robe Robin 300 LEDWash – M3 116 Total Robe Robin 300 LEDWash – M3 117 Total Robe Robin 300 LEDWash – M3 118 Total Robe Robin 300 LEDWash – M3 119 Total Robe Robin 300 LEDWash – M3 110 Total Robe Robin 300 LEDWash – M3 111 Total Robe Robin 300 LEDWash – M3 112 Total Robe Robin 300 LEDWash – M3 114 Total Robe Robin 300 LEDWash – M3 115 Total Robe Robin 300 LEDWash – M3 116 Total Robe Robin 300 LEDWash – M3 117 Total Robe Robin 300 LEDWash – M3 118 Total Robe Robin 300 LEDWash – M3 119 Total Robe Robin 300 LEDWash – M3 110 Total Robe Robin 300 LEDWash – M3 110 Total Robe Robin 300 LEDWash – M3 1111 Total Robe Robin 300 LEDWash – M3 1111 Total Ro	65	2	94	Philips Color Kinetics	ColorBlast 12	Сус Тор
101	66	2	97	Philips Color Kinetics	ColorBlast 12	Сус Тор
102	67	2	100	Philips Color Kinetics	ColorBlast 12	Сус Тор
102						
103	101	1	301*	Robe	Robin 300 LEDWash – M3	
104	102	1	321	Robe	Robin 300 LEDWash – M3	
105	103	1	341	Robe	Robin 300 LEDWash – M3	
106 1 401 Robe Robin 300 LEDWash – M3 111 3 1 VariLite VL3500 Spot – VL3500 Spot FOH 112 3 32 VariLite VL3500 Spot – VL3500 Spot FOH 113 3 63 VariLite VL3500 Spot – VL3500 Spot FOH 114 3 94 VariLite VL3500 Spot – VL3500 Spot FOH	104	1	361	Robe	Robin 300 LEDWash – M3	
111 3 1 VariLite VL3500 Spot – VL3500 Spot FOH 112 3 32 VariLite VL3500 Spot – VL3500 Spot FOH 113 3 63 VariLite VL3500 Spot – VL3500 Spot FOH 114 3 94 VariLite VL3500 Spot – VL3500 Spot FOH	105	1	381	Robe	Robin 300 LEDWash – M3	
112 3 32 VariLite VL3500 Spot – VL3500 Spot FOH 113 3 63 VariLite VL3500 Spot – VL3500 Spot FOH 114 3 94 VariLite VL3500 Spot – VL3500 Spot FOH	106	1	401	Robe	Robin 300 LEDWash – M3	
112 3 32 VariLite VL3500 Spot – VL3500 Spot FOH 113 3 63 VariLite VL3500 Spot – VL3500 Spot FOH 114 3 94 VariLite VL3500 Spot – VL3500 Spot FOH						
113 3 63 VariLite VL3500 Spot – VL3500 Spot FOH 114 3 94 VariLite VL3500 Spot – VL3500 Spot FOH	111	3	1	VariLite	VL3500 Spot – VL3500 Spot	FOH
113 3 63 VariLite VL3500 Spot – VL3500 Spot FOH 114 3 94 VariLite VL3500 Spot – VL3500 Spot FOH	112	3	32	VariLite	VL3500 Spot – VL3500 Spot	FOH
114 3 94 VariLite VL3500 Spot – VL3500 Spot FOH	113		63	VariLite		FOH
·	114		94			
		3	125		VL3500 Spot – VL3500 Spot	FOH

^{*} Think Offset!!

Appendix 2 – Level 2 Hookup Additions

Channel	Universe	Address	Manufacturer	Туре	Focus/Notes
71	2	1	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
72	2	4	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
73	2	7	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
74	2	10	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
75	2	13	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
76	2	16	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
77	2	19	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
78	2	22	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
79	2	25	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
80	2	28	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
81	2	31	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
82	2	34	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
83	2	37	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
84	2	40	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
85	2	43	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
86	2	46	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
87	2	49	Philips Color Kinetics	ColorBlast 12	Cyc Bottom
121	2	351	VariLite	VL2000 Wash – Enhanced 16B	Over-stage
122	2	366	VariLite	VL2000 Wash – Enhanced 16B	Over-stage
123	2	381	VariLite	VL2000 Wash – Enhanced 16B	Over-stage
124	2	396	VariLite	VL2000 Wash – Enhanced 16B	Over-stage
131	2	201	Martin	Mac 700 Profile – Ext	Over-stage
132	2	232	Martin	Mac 700 Profile – Ext	Over-stage
133	2	263	Martin	Mac 700 Profile – Ext	Over-stage
134	2	294	Martin	Mac 700 Profile – Ext	Over-stage

Appendix 3 – Scroll Setup

Generic Scrolls (Channels 21 - 26) **Open Frame** 1 R10 - Medium Yellow 3 R27 - Medium Red R339 – Broadway Pink 5 R351 - Lavender Mist R359 - Medium Violet R370 - Italian Blue R38 – Light Rose R65 - Daylight Blue 9 10 R85 - Deep Blue 11 R90 - Dark Yellow Green

Appendix 4 – Show File Data

The following Groups, Palettes and Presets are included in the show file:

Group #	Label	Channels
1	Specials	1 thru 3
2	Band	4 thru 9
3	Blue Sides	11 + 12
4	Pink Sides	13 + 14
5	Yellow Sides	15 + 16
6	Texture	21 thru 26
7	Top Lights	31 thru 45
8	LED Cyc Top	51 thru 67
9	LED Cyc Bottom	71 thru 87
11	Robin 300s	101 thru 106
12	VL3500s	111 thru 115
13	VL2000s	121 thru 124
14	Mac 700s	131 thru 134
16	All movers	G11 thru G14
20	Cyc In	Cyc In
21	Cyc Out	Cyc Out
25	CP Group	G7 + G8 + G11 thru G14
30	Area lights in a cross-stage order	1, 4, 2, 5, 3

Color Palette #	Label	Groups Used
1	Red	G25
2	Orange	G25
3	Yellow	G25
4	Green	G25
5	Light Blue	G25
6	Dark Blue	G25
7	Magenta	G25
Focus Palettes #	Label	
1	DSR Desk	G12
2	USC Solo	G12
3	DSL Study	G12
4	Vocals (USR Platform)	G12
5	Guitar (USL Platform)	G12
Beam Palettes #	Label	
1	All Beam parameters	G12
2	Just Gobo Select	G12
3	Just Zoom	G12
Preset #	Label	
1	USC Red (Solo In Color)	G12
5	Movers – Intensity	G12
6	Movers – Intensity and Beam	G12



London, UK ■ Unit 26-28, Victoria Industrial Estate, Victoria Road, London W3 6UU, UK ■ Tel +44 (0)20 8896 1000 ■ Fax +44 (0)20 8896 2000

Rome, IT ■ Via Pieve Torina, 48, 00156 Rome, Italy ■ Tel +39 (06) 32 111 683 ■ Fax +44 (0) 20 8752 8486

Holzkirchen, DE ■ Ohmstrasse 3, 83607 Holzkirchen, Germany ■ Tel +49 (80 24) 47 00-0 ■ Fax +49 (80 24) 47 00-3 00

Hong Kong ■ Rm 1801, 18/F, Tower 1 Phase 1, Enterprise Square, 9 Sheung Yuet Road, Kowloon Bay, Kowloon, Hong Kong ■ Tel +852 2799 1220 ■ Fax +852 2799 9325

Service: (Americas) service@etcconnect.com ■ (UK) service@etceurope.com ■ (DE) techserv-hoki@etcconnect.com ■ (Asia) service@etceasia.com

Web: www.etcconnect.com ■ Copyright © 2016 ETC. All Rights Reserved. ■ Product information and specifications subject to change.

4310M4211-2.4.0 ■ Rev. A ■ Released 2016 ■ ETC intends this document to be provided in its entirety.

Corporate Headquarters ■ 3031 Pleasant View Road, P.O. Box 620979, Middleton, Wisconsin 53562-0979 USA ■ Tel +608 831 4116 ■ Fax +608 836 1736